

- To prevent the risk of fire, the appliance needs space to allow heat to escape. Make sure that the appliance has sufficient space around it. Do not allow the appliance to come into contact with flammable materials. The appliance must not be covered.
- The popcorn machine is for domestic use only.
- Do not use more than one full cup of popcorn at a time as this will overload the machine.

Technical specifications
220-240V 50/60 Hz 310W

Description of parts



Before first use

- The popcorn maker only requires minimal assembly before first use.
- Position the kettle drum in the brackets and secure using the two screws, finally screw in the crank handle.*
- Ensure that the machine is clean, dry and dust free.

*note: this is reverse thread, rotate anti-clockwise to tighten.

Instructions for use

1. Position the popcorn maker on a flat, level surface.
2. Make sure that the popcorn kettle is securely in place.
3. Switch the machine on to warm up by pressing the on/off switch located on the top of the machine (you can also turn the lights on and off using a second switch located on the top of the machine).
4. Allow the machine to run for 3-5 minutes to fully heat up the kettle.



Popcorn machine on/off

Lights on/off

5. Switch the machine off.
6. Add 2/3 tablespoon of light vegetable oil to the kettle.
7. Using the measure provided add 2 oz popcorn kernels (the large side of the measuring cup).
8. Switch the Popcorn maker on, after a few moments the continuous popping action will automatically feed the popcorn out of the popcorn kettle into the main body of the machine.
9. Once the corn has finished popping turn the machine off.
10. Turn the crank handle to tip the kettle and pour out any popcorn left in the popcorn kettle.
11. Turn the popcorn machine off and allow to cool fully before putting the machine away or using it again (approximately 10-12 minutes).

Cleaning and maintenance

- Do not allow grease or oil to build up in the machine as this will cause the machine to smoke.
- Before cleaning, remove from the mains power and ensure that the machine has completely cooled.
- Clean the plastic parts of the machine with a damp cloth; never use abrasive products as they could damage the machine.